


JM - BNT 90

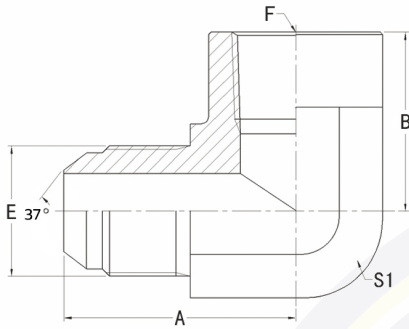

Part No.	Thread		Dimension (mm)		
	E	F	A	B	S1
	JIC37	BSPT			
JM04-BNT02 90	7/16"-20	1/8"-28	27.5	20	16
JM04-BNT04 90	7/16"-20	1/4"-19	30	25	19
JM05-BNT04 90	1/2"-20	1/4"-19	30	25	19
JM06-BNT06 90	9/16"-18	3/8"-19	33.5	27	24
JM06-BNT04 90	9/16"-18	1/4"-19	30.5	25	19
JM08-BNT08 90	3/4"-16	1/2"-14	39.5	31.5	30
JM08-BNT06 90	3/4"-16	3/8"-19	36	27	24
JM10-BNT08 90	7/8"-14	1/2"-14	42.5	31.5	30
JM12-BNT12 90	1-1/16"-12	3/4"-14	48	37	33
JM12-BNT08 90	1-1/16"-12	1/2"-14	46.2	31.5	30
JM16-BNT16 90	1-5/16"-12	1"-11	54	43	41
JM20-BNT20 90	1-5/8"-12	1-1/4"-11	62	46	50
JM24-BNT24 90	1-7/8"-12	1-1/2"-11	74.5	55	63

**THE
HYDRAULIC**