



BFS - BMI

Part No.	Thread		Dimension (mm)				
	E	F	A	B	S1	S2	L
	BSPP	BSPP					
BFS02-BMI02	1/8"-28	1/8"-28	12	6.5	14	14	26
BFS04-BMI04	1/4"-19	1/4"-19	16	8	17	19	30.5
BFS06-BMI04	1/4"-19	3/8"-19	16	9	17	22	31.5
BFS04-BMI06	3/8"-19	1/4"-19	18	8	19	19	33.5
BFS06-BMI06	3/8"-19	3/8"-19	18	9	19	22	33.5
BFS08-BMI06	3/8"-19	1/2"-14	18	12	19	27	35
BFS06-BMI08	1/2"-14	3/8"-19	20	9	22	22	37.5
BFS08-BMI08	1/2"-14	1/2"-14	20	12	22	27	39
BFS12-BMI08	1/2"-14	3/4"-14	20	13.5	27	32	42.5
BFS08-BMI12	3/4"-14	1/2"-14	22	12	30	27	43
BFS12-BMI12	3/4"-14	3/4"-14	22	13.5	30	32	44.5
BFS16-BMI12	3/4"-14	1"-11	22	16	32	41	47
BFS12-BMI16	1"-11	3/4"-14	24	13.5	36	32	47.5
BFS16-BMI16	1"-11	1"-11	24	16	36	41	49
BFS20-BMI16	1"-11	1-1/4"-11	24	18.5	41	50	54
BFS20-BMI20	1-1/4"-11	1-1/4"-11	27	18.5	46	50	54.5
BFS24-BMI20	1-1/4"-11	1-1/2"-11	27	19	46	55	57.5
BFS24-BMI24	1-1/2"-11	1-1/2"-11	27	19	50	55	59.5

THE
HYDRAULIC