



BNT - BNT

Part No.	Thread		Dimension (mm)	
	E	F	L	S1
	BSPP	BSPP		
BNT02-BNT02	1/8"-28	1/8"-28	20	14
BNT02-BNT04	1/8"-28	1/4"-19	30	19
BNT04-BNT04	1/4"-19	1/4"-19	30	19
BNT04-BNT06	1/4"-19	3/8"-19	30	22
BNT04-BNT08	1/4"-19	1/2"-14	40	27
BNT06-BNT06	3/8"-19	3/8"-19	30	22
BNT06-BNT08	3/8"-19	1/2"-14	40	27
BNT06-BNT12	3/8"-19	3/4"-19	37	36
BNT08-BNT08	1/2"-14	1/2"-14	40	27
BNT08-BNT12	1/2"-14	3/4"-14	42	36
BNT12-BNT12	3/4"-19	3/4"-14	42	36
BNT12-BNT16	3/4"-14	1"-11	50	41
BNT16-BNT16	1"-11	1"-11	50	41
BNT16-BNT20	1"-11	1-1/4"-11	52	50
BNT20-BNT20	1-1/4"-11	1-1/4"-11	55	50
BNT24-BNT24	1-1/2"-11	1-1/2"-11	55	55
BNT32-BNT32	2"-11	2"-11	65	70

THE
HYDRAULIC