


# BS - BNT

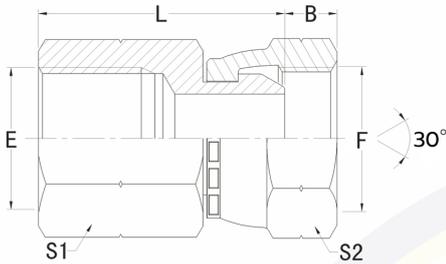

Part No.	Thread		Dimension (mm)			
	E	F	B	L	S1	S2
	BSPP	BSPP				
BS02-BNT02	1/8"-28	1/8"-28	3.5	29	14	14
BS04-BNT04	1/4"-19	1/4"-19	5.5	32	19	19
BS06-BNT04	1/4"-19	3/8"-19	6.3	33.5	19	22
BS06-BNT06	3/8"-19	3/8"-19	6.3	36.5	22	22
BS04-BNT06	3/8"-19	1/4"-19	5.5	35	22	19
BS08-BNT06	3/8"-19	1/2"-14	7.5	38	22	27
BS06-BNT08	1/2"-14	3/8"-19	6.3	41.5	27	22
BS08-BNT08	1/2"-14	1/2"-14	7.5	42	27	27
BS10-BNT08	1/2"-14	5/8"-14	9.5	43.5	27	30
BS12-BNT08	1/2"-14	3/4"-14	10.9	44	27	32
BS08-BNT10	5/8"-14	1/2"-14	7.5	44	30	27
BS08-BNT12	3/4"-14	1/2"-14	7.5	44.5	36	27
BS12-BNT12	3/4"-14	3/4"-14	10.9	45.5	32	32
BS16-BNT12	3/4"-14	1"-11	11.7	47	36	41
BS12-BNT16	1"-11	3/4"-14	10.9	50	41	32
BS16-BNT16	1"-11	1"-11	11.7	51.5	41	41
BS20-BNT20	1-1/4"-11	1-1/4"-11	11	55.5	50	50
BS24-BNT24	1-1/2"-11	1-1/2"-11	13	57.5	55	55
BS32-BNT32	2"-11	2"-11	16	62	70	70

THE  
HYDRAULIC