


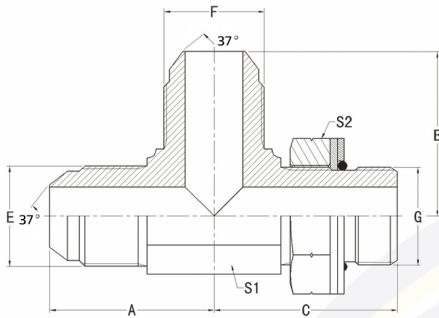

BMO - JM - JM

Part No.	Thread			Dimension (mm)				
	E	F	G	A	B	C	S1	S2
	JIC37	JIC37	BSPP					
BMO04-JM04-JM04	7/16"-20	7/16"-20	1/4"-19	26.6	26.6	31.9	14	19
BMO04-JM05-JM05	1/2"-20	1/2"-20	1/4"-19	26.6	26.6	31.3	14	19
BMO04-JM06-JM06	9/16"-18	9/16"-18	1/4"-19	26.6	26.6	31.3	14	19
BMO06-JM06-JM06	9/16"-18	9/16"-18	3/8"-19	28.5	28.5	36.8	16	22
BMO04-JM06-JM06	9/16"-18	9/16"-18	1/4"-19	26.9	26.9	31.3	14	19
BMO06-JM08-JM08	3/4"-16	3/4"-16	3/8"-19	32	32	36.8	19	22
BMO08-JM08-JM08	3/4"-16	3/4"-16	1/2"-14	35	35	43.2	22	27
BMO08-JM10-JM10	7/8"-14	7/8"-14	1/2"-14	37.8	37.8	44	22	27
BMO12-JM12-JM12	1-1/16"-12	1-1/16"-12	3/4"-14	44	44	49.5	27	32
BMO16-JM16-JM16	1-5/16"-12	1-5/16"-12	1"-11	48.8	48.8	53	33	41

THE
HYDRAULIC