


JM - BMT - JM

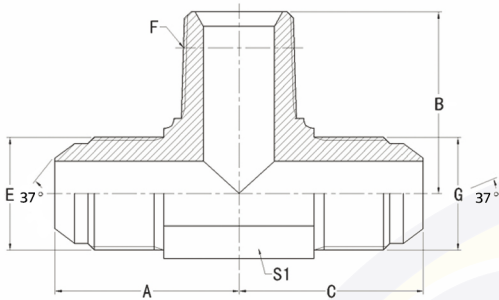

Part No.	Thread			Dimension (mm)			
	E	F	G	A	B	C	S1
	JIC37	BSPT	JIC37				
JM04-BMT04-JM04	7/16"-20	1/4"-19	7/16"-20	26.6	25.5	26.6	14
JM04-BMT02-JM04	7/16"-20	1/8"-28	7/16"-20	24.5	21	24.5	11
JM06-BMT06-JM06	9/16"-14	3/8"-19	9/16"-18	28.5	28.5	28.5	16
JM06-BMT04-JM06	9/16"-14	1/4"-19	9/16"-18	26.9	25.5	26.9	14
JM08-BMT08-JM08	3/4"-16	1/2"-14	3/4"-16	34.8	36	34.8	22
JM08-BMT06-JM08	3/4"-16	3/8"-19	3/4"-16	32	30.5	32	19
JM10-BMT08-JM10	7/8"-14	1/2"-14	7/8"-14	37.8	36	37.8	22
JM12-BMT12-JM12	1-1/16"-12	3/4"-14	1-1/16"-12	44.2	43.5	44.2	27
JM16-BMT16-JM16	1-5/16"-12	1"-11	1-5/16"-12	49	50	49	33
JM20-BMT20-JM20	1-5/8"-12	1-1/4"-11	1-5/8"-12	55.5	56.5	55.5	41
JM24-BMT24-JM24	1-7/8"-12	1-1/2"-11	1-7/8"-12	62.5	62.5	62.5	48

THE
HYDRAULIC